

**MINIMEX**  
COFFEE GRINDER

คู่มือการใช้งาน  
เครื่องบดกาแฟ  
**Minimex**  
รุ่น MCG3



**Instruction Manual**  
**Minimex Conical Burr Coffee Grinder**

Model : MCG3  
220-240V.,~50Hz.,150W.

ไทย / English



## ข้อควรระวัง

ควรอ่านข้อควรระวังต่อไปนี้อย่างละเอียดก่อนใช้งาน


1. ก่อนใช้งานควรตรวจสอบให้แน่ใจว่า ระบบไฟในตัวเครื่องตรงกับระบบไฟในบ้านของท่าน
2. หากท่านพบว่า เกิดความเสียหายกับตัวเครื่องหรือสายไฟ ซึ่งอาจเกิดจากเครื่องหล่นจากที่สูงหรือเหตุอื่นๆ ควรหยุดใช้งานทันทีแล้วส่งเครื่องเข้าตรวจสอบ ณ ศูนย์บริการฯ
3. ถ้าพบรอยฉีกขาดที่สายไฟควรหยุดใช้และส่งเข้าศูนย์บริการฯ เพื่อทำการเปลี่ยนสายใหม่ทันที
4. ควรปิดสวิตซ์และถอดปลั๊กออกจากเต้าเสียบไฟบ้านทุกครั้งที่มีได้ใช้งาน ขณะถอดหรือใส่อุปกรณ์ ขณะทำความสะอาด
5. อย่าปล่อยให้สายไฟรัดตึงกับขอบโต๊ะหรือวางใกล้แหล่งความร้อน
6. ห้ามจุ่มตัวเครื่องลงในน้ำหรือน้ำยาใดๆ หรือใส่ในเครื่องล้างจาน อุปกรณ์ชิ้นเดียวที่สามารถจุ่มลงน้ำคือ โถใส่เม็ดกาแฟที่ถอดออกจากตัวเครื่องแล้ว
7. ดูแลอย่างใกล้ชิดหากใช้งานใกล้เด็ก หรือผู้ด้อยความสามารถทางกายภาพ
8. หลีกเลี่ยงอย่าใส่นิ้วลงในช่องบดกาแฟ
9. ห้ามเปิดฝาโถจนกว่าเครื่องจะหยุดสนิท
10. ห้ามใช้งานในสภาพเปิดฝาเครื่อง
11. ห้ามใช้อุปกรณ์อื่นร่วมกับเครื่อง เพราะอาจเป็นสาเหตุให้เกิดความเสียหายและอันตรายแก่ผู้ใช้ได้
12. ตรวจสอบอย่างสม่ำเสมอ เพื่อมีหัวสตุ๋นเข้าไปในโถใส่เม็ดกาแฟ
13. เครื่องบดกาแฟนี้ไม่ควรอนุญาตให้เด็ก ผู้ด้อยความสามารถทางกายภาพ ผู้มีจิตใจไม่สมบูรณ์ และผู้ขาดประสบการณ์การใช้งานอุปกรณ์ไฟฟ้าเหล่านี้เป็นผู้ใช้ ท่านอาจอนุญาตให้บุคคลดังกล่าวใช้อุปกรณ์ได้ภายใต้การดูแลและแนะนำอย่างใกล้ชิด
14. ไม่อนุญาตให้เด็กใช้เป็นเครื่องเล่น
15. ห้ามใช้เครื่องบดกาแฟนี้ เพื่อจุดประสงค์อื่นซึ่งนอกเหนือจากวัตถุประสงค์ในการออกแบบ ในกรณีเช่นนี้การรับประกันจะสิ้นสุดลงทันที
16. เครื่องบดกาแฟนี้ออกแบบให้ใช้ในครัวเรือนที่เป็นที่ร่มเท่านั้น ห้ามนำไปใช้ในที่โล่งแจ้ง หรือนำไปใช้ในเชิงพาณิชย์ กรณีเช่นนี้จะทำให้การรับประกันสิ้นสุดลงทันที

เครื่องบดกาแฟนี้ออกแบบให้ใช้ในครัวเรือนเท่านั้น

# ส่วนประกอบ

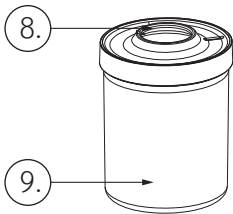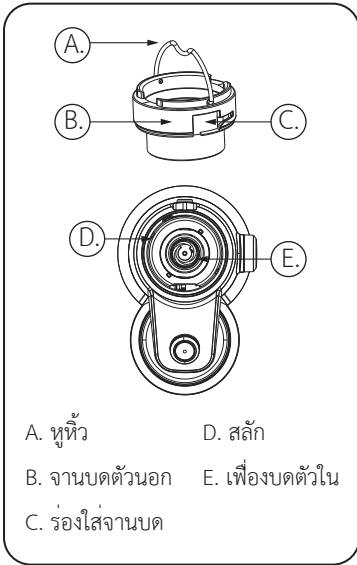

1. ฝาปิด
2. โถใส่เมล็ดกาแฟ
3. ช่องใส่โถ
4. ปุ่มเปิด / ปิด
5. ปุ่มตั้งปริมาณกาแฟ
6. ปุ่มปลดโถ

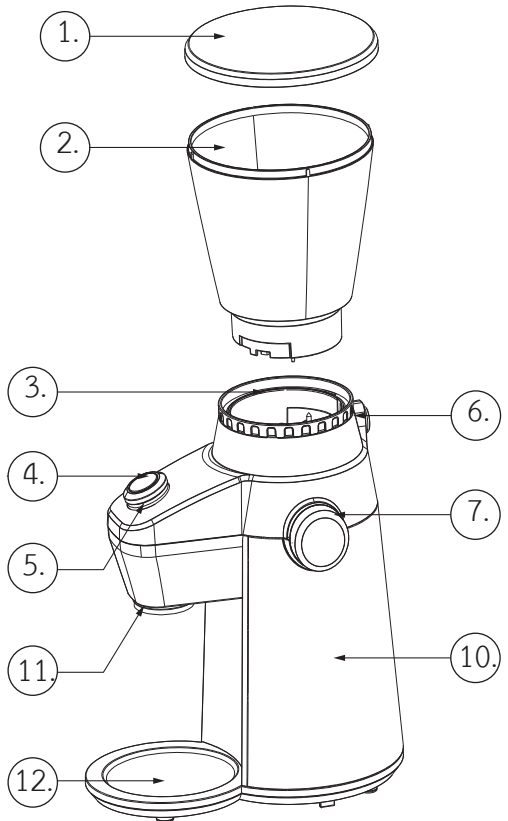

7. ปุ่มปรับความละเอียดกาแฟ
8. ฝาโถใส่ผงกาแฟ
9. โถใส่ผงกาแฟ
10. ตัวเครื่อง
11. ช่องจ่ายผงกาแฟ
12. ฐานวางโถใส่ผงกาแฟ



## ก่อนการใช้งาน


1. นำเครื่องออกจากกล่อง แล้วเก็บวัสดุให้เรียบร้อยอย่าให้เด็กเล่น
2. ใช้ผ้าชุบน้ำบิดหมาดเช็ดให้สะอาด
3. นำโถใส่เม็ดกาแฟ และโถใส่ผงกาแฟออกล้างด้วยน้ำยาล้างจาน แล้วเช็ดให้แห้ง
4. ติดตั้งโถใส่เม็ดกาแฟ

### อันตราย !

1. ห้ามจุ่มตัวเครื่องลงในน้ำ
2. ห้ามเทน้ำลงในโถใส่เม็ดกาแฟ เพื่อล้างโถ

## วิธีใช้งาน

1. วางตัวเครื่องบนพื้นราบ
2. ติดตั้งโถใส่เม็ดกาแฟที่ส่วนบนของตัวเครื่องโดย
  - 2.1 หันโถที่มีเครื่องหมาย  ให้ตรงกับเครื่องหมาย  บนปุ่มปลดโถ
  - 2.2 วางโถลงตรงๆ ให้สลักโถตรงกับร่องของตัวเครื่อง กดลงจนสุด
  - 2.3 หมุนโถตามเข็มนาฬิกา จนโถเข้าล็อกติดกับตัวเครื่องแน่น
  - 2.4 การถอดโถออกจากตัวเครื่อง ทำได้โดยกดปุ่มปลดโถ แล้วหมุนโถทวนเข็มนาฬิกา โถจะหลุดออกจากตัวเครื่องโดยง่าย

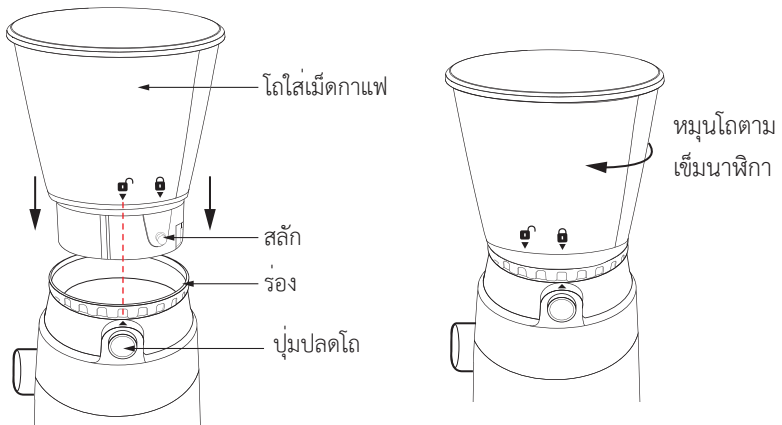


**หมายเหตุ :** การติดตั้งโถเข้ากับตัวเครื่องจะมีสวิตช์เชื่อมต่อเองได้ ถ้าท่านมิได้ใส่โถให้ถูกต้อง เครื่องจะไม่สามารถทำงานได้

3. เปิดฝาโถแล้วเทเม็ดกาแฟใส่ลงโถ (โถสามารถบรรจุเม็ดกาแฟได้สูงสุดประมาณ 360 กรัม) **ควรใส่เม็ดกาแฟในปริมาณที่ต้องการใช้เท่านั้น** การใส่เม็ดกาแฟไว้นาน และไม่ได้ใช้เป็นเวลานานจะทำให้คุณภาพของเม็ดกาแฟด้อยลงได้

**หมายเหตุ :** เครื่องบดกาแฟนี้ มีระบบความปลอดภัยป้องกันมอเตอร์ หากท่านใช้งานต่อเนื่องนานประมาณ 5 นาที จนทำให้มอเตอร์เกิดความร้อนเกินระดับ ระบบจะตัดการทำงานทันที ควรปล่อยให้เครื่องเย็นลงประมาณ 30 นาที เครื่องจะสามารถกลับมาทำงานได้ตามปกติ



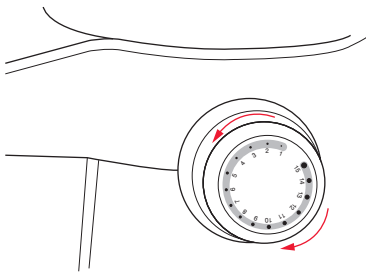



4. ปิดฝาโถให้สนิท ท่านควรปิดฝาโถให้สนิทเพราะจะช่วยยืดอายุเม็ดกาแฟให้มีความสดและรสชาติได้นานขึ้น
5. ปิดฝาโถใส่ผงกาแฟให้แน่น แล้วใส่ลงบนฐานเครื่องโดยวิธีดันเข้าไปจนเข้าที่ (บริเวณช่องออกกาแฟจะมีลูกยางที่มีความนิ่มทำให้ท่านสามารถดันโถเข้าที่ได้โดยง่าย) ควรตรวจสอบให้แน่ใจว่าช่องจ่ายผงกาแฟบดตรงกับช่องรับกาแฟ
6. หมุนปุ่มปรับระดับความละเอียดตามต้องการ (การหมุนปุ่มควรหมุนขณะเครื่องกำลังทำงาน จะทำให้หมุนได้ตลอด หากท่านหมุนขณะเครื่องหยุด ท่านจะสามารถหมุนได้ครั้งละ 2-3 ระดับเท่านั้น)





 หมุนทวนเข็มนาฬิกา → ละเอียด

 หมุนตามเข็มนาฬิกา → หยาบ

7. ท่านสามารถตั้งปริมาณกาแฟที่ต้องการได้ โดยหมุนปุ่มตั้งปริมาณกาแฟ ซึ่งจะทำงานโดยใช้เวลาเป็นตัวกำหนด ตามตารางต่อไปนี้

สัญลักษณ์						
เวลาบด	ตามความต้องการ (ไม่เกิน 5 นาที)	10 วินาที	20 วินาที	30 วินาที	40 วินาที	50 วินาที

ท่านสามารถเลือกโปรแกรมได้ตามต้องการ เริ่มต้นบดโดยการกดปุ่ม 1 ครั้ง ถ้าต้องการหยุดให้กดอีก 1 ครั้ง เครื่องจะหยุด

8. เสียบปลั๊กเข้ากับเต้าเสียบไฟบ้าน สัญลักษณ์บนปุ่มตั้งเวลาบดจะเริ่มดับที่  ทุกครั้งที่เปิดเครื่อง เมื่อท่านเลือกปุ่มตั้งเวลาบดแล้ว กด 1 ครั้ง เครื่องจะเริ่มบด ผงกาแฟจะจ่ายออกที่ช่องจ่ายผงกาแฟและตกลงในโถ หากท่านใช้โปรแกรมตั้งเวลา  เครื่องจะหยุดเองโดยอัตโนมัติ

**หมายเหตุ :** โปรแกรม Sleep mode (ดับเองอัตโนมัติ) หากไม่มีการใช้เครื่องเป็นระยะเวลา นานกว่า 90 วินาที สัญลักษณ์บนปุ่มตั้งเวลาจะดับ และจะสว่างขึ้นเมื่อมีการหมุนปุ่ม

**หมายเหตุ :** หากมีการใช้งานต่อเนื่องยาวนานติดต่อกันถึง 5 นาที ต้องพักเครื่องเป็นระยะเวลา 30 นาที แต่หากใช้งานรอบละ 90 วินาที ติดต่อกัน 2 รอบก็ควรมีการพักเครื่องเช่นกัน

**หมายเหตุ :** ท่านสามารถกดปุ่มเพื่อให้เครื่องเริ่มบด และกดอีกครั้งเพื่อให้เครื่องหยุดเวลาใดก็ได้

9. การบดโดยใช้โปรแกรมตั้งเวลาบด เครื่องจะหยุดเองเมื่อหมดเวลา และจะอยู่ในโหมด Stand by พร้อมใช้งานอีกครั้ง

**หมายเหตุ :** โถบรรจุกาแฟบดสามารถใส่กาแฟได้ 155 กรัม โปรดใช้ความระมัดระวัง อย่าบดจน ผงกาแฟล้นโถ


10. เมื่อบดกาแฟเสร็จสิ้นแล้ว ท่านสามารถถอดโถใส่ผงกาแฟออกนอກาแฟไปใช้ได้ และควรถอดปลั๊กออกจากเต้าเสียบไฟบ้านด้วย

## การบำรุงรักษาและทำความสะอาด

**ข้อควรระวัง! :** ควรถอดปลั๊กออกจากเต้าเสียบไฟบ้านก่อนทำความสะอาดทุกครั้ง ห้ามจุ่มเครื่องลงในน้ำหรือของเหลวใดๆ เพื่อทำความสะอาด หากเครื่องมิได้ถูกใช้งานก็ควรถอดปลั๊กออกจากเต้าเสียบไฟบ้านเช่นกัน

1. ถอดโถใส่เมล็ดกาแฟ และโถใส่ผงกาแฟออกจากตัวเครื่องแล้วนำไปล้างด้วยน้ำยาล้างจาน แล้วเช็ดให้แห้ง

2. ยกหูหัวของงานบดตัวนอกขึ้น (A) แล้วหมุนทวนเข็มนาฬิกา งานบดตัวนอกจะหลุดออกมาโดยง่าย ใช้แปรงขัดงานบด (B) ให้สะอาด ท่านสามารถใส่งานบดกลับเข้าที่โดยวางงานบด ให้ร่องใส่งานบด (C) ตรงกับสลัก (D) แล้วหมุนงานบดตามเข็มนาฬิกา จนงานบดติดเข้ากับเฟืองบดตัวใน (E) เข้าที่

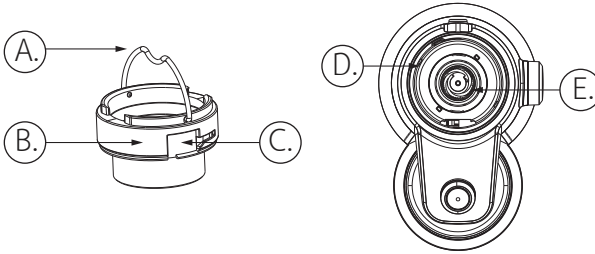

- A. หูหัว  
B. งานบดตัวนอก  
C. ร่องใส่งานบด  
D. สลัก  
E. เฟืองบดตัวใน

## เทคนิคการบดกาแฟ

- กาแฟบดหยาบ ใช้กับเครื่องชงกาแฟชนิดกรอง เช่น French Press กาแฟบดปานกลาง ใช้กับกาแฟดริป (Drip) กาแฟบดละเอียด ใช้กับเครื่องชงกาแฟเอสเปรสโซ (Espresso)
- เพื่อให้ได้รสชาติกาแฟที่สดใหม่ ควรใส่เมล็ดกาแฟลงในโถให้เพียงพอสำหรับการบดในแต่ละครั้งเท่านั้น ไม่ควรใส่เมล็ดกาแฟทิ้งไว้ในโถหรือทิ้งกาแฟที่บดแล้วในโถกาแฟเป็นเวลานาน เพราะจะทำให้เสียรสชาติที่สดใหม่ของกาแฟไป เมื่อเปิดถุงกาแฟแล้วควรพับถุงให้อากาศไม่สามารถผ่านเข้าออกได้ แล้วปิดด้วยเครื่องหนีบถุงกาแฟ วิธีนี้จะช่วยให้เมล็ดกาแฟมีรสชาติสดใหม่ได้นานกว่าปกติ โถใส่เมล็ดกาแฟ โถใส่ผงกาแฟบดของบดกาแฟ งานบด ควรทำความสะอาดอย่างสม่ำเสมอ
- เครื่องบดกาแฟนี้ใช้บดกาแฟที่แห้งกรอบเท่านั้น ไม่ควรใช้บดสิ่งอื่นที่ไม่ใช่เมล็ดกาแฟ เพราะอาจทำให้มีกลิ่นตกค้างและทำให้กาแฟมีรสชาติผิดปกติได้

### ข้อมูลทางเทคนิค

แรงดันไฟ : 220-240 โวลต์ ~50 เฮิร์ต  
กำลังไฟ : 150 วัตต์  
ความจุโถ : 300 กรัม

## ช่วยกันรักษาสิ่งแวดล้อม

เราขอชี้ชวนให้ท่านร่วมรักษาสภาพแวดล้อม ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ที่เหมาะสม



## การรับประกัน

เครื่องบดกาแฟ MiniMex รุ่น MCG3 ระยะเวลาประกัน 1 ปี

### เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและฝีมือการประกอบ โดยสินค้าต้องใช้ในครัวเรือนเท่านั้น ผู้ใช้ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

### ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ เช่น การนำเอาสินค้าที่ออกแบบมาเพื่อการใช้ในครัวเรือน แต่นำไปใช้เพื่อประกอบอาชีพหรือในเชิงพาณิชย์
- ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- มิได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

### การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า หรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า

### การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียดและตัดสินใจว่า ความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆ ทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่า ต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้า แต่สินค้านั้นเดิมไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่าสินค้านั้นใดเหมาะสมที่จะเปลี่ยนแทน

### การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่พอใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่า สินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้ามิได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น

### ศูนย์บริการ

หากท่านต้องการบริการหรือรายละเอียดเพิ่มเติมท่านสามารถติดต่อศูนย์บริการได้ โทร .02 817-8999






## Important Safeguards

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Before use checks that the voltages of wall outlet correspond to the one shown on the rating plate.
2. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
3. If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Do not let cord hang over edge of table or hot surface.
6. Do not immerse the motorized base in liquid, or place in dishwasher. Damage to the unit will occur if submerged in liquid or filling the liquid into the container. Only the top cover may be immersed.
7. Close supervision is necessary when your appliance is being used near children or infirm persons.
8. Ensure fingers are kept well away from moving parts.
9. Do not remove cover until blade has completely stopped.
10. Do not attempt operation without the cover being in place.
11. The use of accessory not recommended by the manufacturer may cause injuries to persons.
12. Check grinding chamber for presence of foreign objects before using.
13. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance
15. Do not operate the appliance for other than its intended use.
16. Do not use outdoors.

**HOUSEHOLD USE ONLY**

# Know Your COFFEE GRINDER

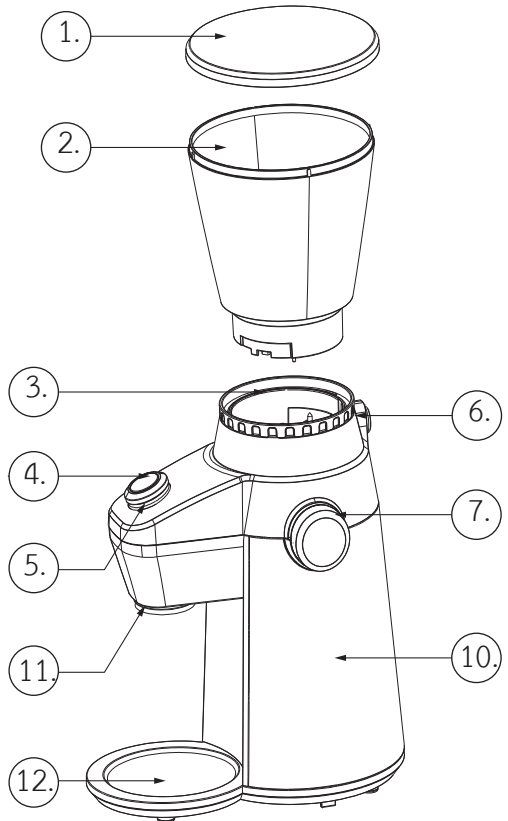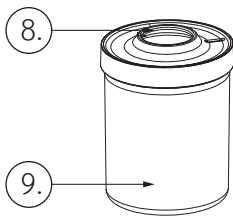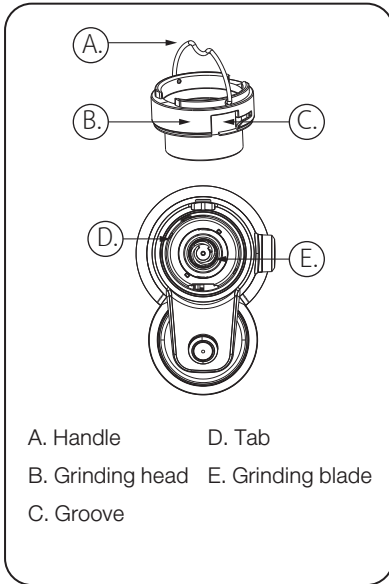

- 1. Bean hopper lid
- 2. Bean hopper
- 3. Bean hopper holder
- 4. Start/Stop button
- 5. Click-wheel
- 6. Bean hopper release button
- 7. Strength Control dial
- 8. Ground coffee container lid
- 9. Ground coffee container
- 10. Body
- 11. Coffee powder outlet
- 12. Ground coffee container holder


## Before The First Time

1. Carefully unpack your coffee grinder and remove all packing materials.
2. To remove any dust that may have accumulated during packaging.
3. And then detach the bean hopper by following the operation as below: press down the bean hopper release button and simultaneously turn the bean hopper anticlockwise to remove the bean hopper from bean hopper holder for cleaning.
4. After it, rinse the bean hopper, bean hopper lid, ground coffee container lid and ground coffee container with water and then dry thoroughly.

**CAUTION :** Never immerse the body in water for cleaning and do not fill the bean hopper with water for cleaning.

1. Place the coffee grinder on a flat surface.
2. Assemble the bean hopper to the bean hopper holder by following the operation as below :

Firstly, put the bean hopper into the bean hopper holder by making the tab on the bean hopper align with the groove on the bean hopper holder and then turn the bean hopper clockwise until it is tightly locked into the bean hopper holder. When disassemble, press down the bean hopper release button and simultaneously turn the bean hopper anticlockwise to remove the bean hopper from bean hopper holder.

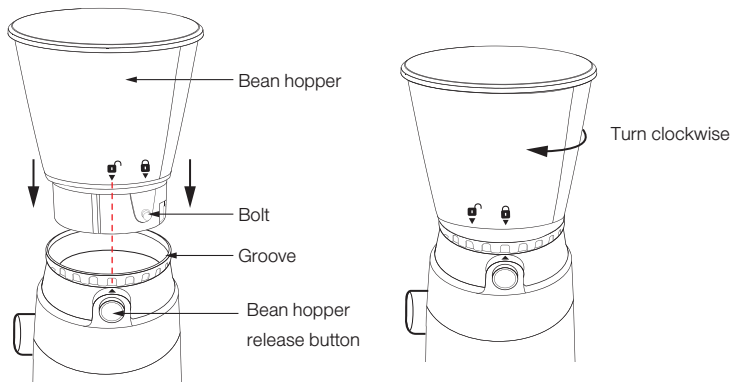


**NOTE :** The bean hopper is equipped with micro switch so that it must be assembled in position before operate, or the appliance will not work.





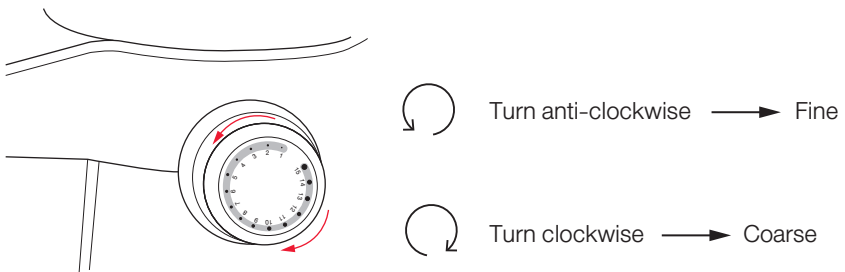

3. Pour appropriate amount of coffee beans into the bean hopper, it must be noted the quantity of coffee beans shall not exceed 360g.

**NOTE :** If run the appliance without coffee beans, the appliance will stop working after running for about 5 minutes. And the appliance must rest for 30 minutes if it is operated for

4. Close the bean hopper lid.
5. Put the ground coffee container (with lid in position) on the ground coffee container holder. Ensure that the opening of ground coffee container shall align with the coffee powder outlet.
6. Turn the strength control dial to select your desired coffee strength. Turn it to the right, the coffee strength will be increased while it will be decreased when turn the strength control dial to the left.



7. The coffee-dispensing amount is determined by grinding time, therefore, you can turn the click-wheel to select your desired grinding time by referring to “ Table 1”. When select, the corresponding indicator of your selected grinding time will light at 100% brightness. If you do not want to adjust the grinding time, the appliance will work under the default grinding time.

Indicator (From left to right)						
Grinding time	5 minutes	10 seconds	20 seconds	30 seconds	40 seconds	50 seconds

8. Connect the appliance with the power source, the first indicator (the default grinding time setting) lights at 100% brightness while the other indicators and the indicator of Start/Stop button light at 50% brightness. And then select your desired grinding time by following “Step 6” based on your demand. After it, press the Start/Stop button, the appliance starts to grind coffee bean under the selected grinding time, after a while, the coffee powder dispenses from the coffee powder outlet. The indicator of Start/Stop button keeps blinking

**NOTE :** The appliance will enter into the sleep state if no any operation within 90 seconds after plug in.

**NOTE :** The appliance must rest for 30 minutes if it is operated for 5 minutes continuously. And it is suggested to operate this appliance for less than 90s per time and minimum 90 seconds rest time must be maintained between continuous two cycles

**NOTE :** You can press Start/Stop button to make the appliance stop running at any time during grinding process.

9. When desired grinding time has reached, the coffee grinder will stop working automatically and go back to standby condition, at that time, the first indicator (the default grinding time setting) lights at 100% brightness while the other indicators and the indicator of Start/Stop button light at 50% brightness.

**NOTE :** The maximum amount of ground coffee container is 155g, make sure the coffee ground shall not overflow.

10. Unplug the appliance, remove the ground coffee container lid and pour out the coffee Ground directly.

## Cleaning and Maintenance


**CAUTION** : Be sure to unplug this appliance and make it cool down completely before cleaning.

To protect against electrical shock, do not immerse cord, plug or body in water or liquid and do not fill the bean hopper with water for cleaning.

After each use, always make sure plug is first removed from wall outlet.

1. Disassemble the bean hopper by following the operation mentioned above, and then rinse the bean hopper, bean hopper lid, ground coffee container and ground coffee container lid with water, and dry them thoroughly.
2. Lift the handle of grinding wheel and then rotate it anticlockwise to remove the grinding wheel, after it, clean the grinding blade with a brush and rinse the grinding wheel with water and then dry it thoroughly. To replace the grinding wheel back in position, firstly, put the grinding wheel into the grinding chamber by making the groove on the grinding wheel align with the tab on the grinding chamber, and then rotate the grinding wheel clockwise until it is fixed well in position (see Fig.2).

**NOTE** : Please operate carefully as the grinding wheel & grinding blade are sharp.

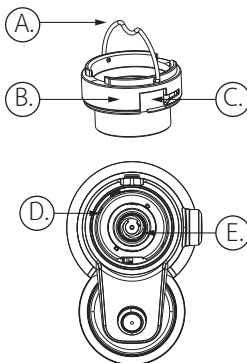

- |                  |                   |
|------------------|-------------------|
| A. Handle        | D. Tab            |
| B. Grinding head | E. Grinding blade |
| C. Groove        |                   |

Fig.2

3. Wipe the body with wet cloth and then dry it completely.
4. When do not use the appliance, store it in a dry and cool environment.

## Cleaning and Maintenance

1. The coarse ground coffee is generally used for percolators and coffee urns. Medium ground coffee is used for drip coffee makers and steam-type espresso machines. A fine ground coffee is used for espresso machines with an electric pump.
2. For the freshest, most flavorful coffee, grind only enough for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding chamber, blades and grinding wheel after each use.
3. This grinder can only grind dry, brittle foods. It will not grind anything moist, extremely hard, or gummy such as whole ginger, chocolate, sesame seeds or oily spices such as cinnamon, cloves or nutmeg. Do not grind peanuts or grains such as wheat, rice, barley, or dried corn. Attempting to grind any of these foods may damage the unit. Never use it to chop ice cubes.
4. Freshly ground peppercorns have a strong aroma and taste that may affect the flavor of coffee beans ground afterward. You may want to purchase a separate grinder if you plan to grind peppercorns.

### Specifications

Volts	:	220-240.V	~50 Hz
Power	:	150 Watts	
Capacity	:	300 g	

## Environment friendly disposal

You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



# Warranty

We hereby warranty our Minimex Coffee Grinder Model MCG3 in a period of 1 (one) year.

## Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use and maintain following the instructions manual..

## Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

## Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof of purchase.

## Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the product is in warranty or not. The decision is solely the rights of the company. If the product proved to be defected and covered by warranty, company will be responsible for parts and labor to repair and deliver the product to customers' house. Customers do not have to pay any fee.If the company considers that it must change its products to customers, but the same model of product is not available, the company will determine an appropriate version of the product to be replaced.

## Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after purchasing date only if the product is completely perfect packaging and has not been used before. Customers must present proof of purchase to return the product at the store of purchase only.

## Service Center

If customer need service or information, customer can contact our Minimex Service Center phone number:02-817-8999.



# MINIMEX

COFFEE GRINDER

จัดจำหน่ายโดย

**บริษัท เพ็ญ เค อินเตอร์เทรดดิ้ง จำกัด**

อาคาร พี.บี. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64  
ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

เบอร์โทร 02-391-0919 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-817-8999