MINIMEX
SUPER BLEND

คู่มือการใช้งาน
เครื่องปั่นน้ำผลไม้
Minimex
รุ่น Super Blend 3 (MCB3)

Instruction Manual
Commercial Blender

Model : MCB3

220-240V~, 50-60Hz, 1500W

ไทย / English

1. อ่านคู่มือก่อนใช้งาน
2. ตรวจสอบสายไฟ หรือปลั๊กไฟเป็นประจำ หากพบว่ามีความเสียหาย ควรส่งเข้าศูนย์บริการฯ เพื่อเปลี่ยนใหม่
3. ระวังอย่าให้สายไฟพับ งอ หรืออยู่ขอบโต๊ะ
4. ห้ามวางตัวเครื่องไว้ใกล้เตาแก๊ส เตาไฟฟ้า และอื่นๆที่หน้าสัมผัสร้อน
5. ไม่ควรซ่อมเครื่อง หรือตรวจเช็คสภาพเครื่องด้วยตัวเอง ควรส่งเข้าศูนย์บริการฯ เพื่อการซ่อมแซมที่ถูกต้อง
6. หากพบว่าสายไฟหรือปลั๊กถลอกเสียหาย ควรหยุดใช้ทันทีและส่งเข้าศูนย์บริการฯ
7. ควรรอให้ใบมีดหยุดหมุนสนิทก่อนการยกโถปั่นออกจากตัวเครื่อง
8. ถอดปลั๊กออกจากเต้าเสียบไฟบ้านทุกครั้งที่เลิกใช้งานและทำความสะอาด
9. ใบมีดของของเครื่องมีความคม **ห้าม**ใช้มือยื่นลงในโถขณะเครื่องกำลังทำงาน
10. **ห้ามทิ้งวัตถุของแข็ง เช่น ช้อน ช้อม ใบมีด ไว้ในโถปั่น ทำให้เกิดอันตรายในการใช้งานซ้ำ เพราะอาจเผลอปั่นวัตถุดังกล่าว**
11. **ระวังใบมีดขณะทำความสะอาด**
12. ห้ามใช้อะไหล่หรืออุปกรณ์ที่ไม่ใช่อะไหล่อุปกรณ์แท้ เพราะอาจเป็นสาเหตุให้เกิดความเสียหายของตัวเครื่อง และอันตรายต่อผู้ใช้งาน
13. **ห้ามปล่อยให้เครื่องทำงานโดยไม่มีวัตถุดิบอาหาร**
14. **ห้ามให้เครื่องปั่นถูกน้ำ หรือของเหลว หรือใช้งานเครื่องในขณะมือเปียก**
15. **ห้ามใช้อุปกรณ์และของมีคมแหย่เข้าไปในโถขณะที่เครื่องทำงาน**
16. **ควรหยุดเครื่อง ปิดสวิตช์เครื่อง จึงค่อยใช้ช้อน หรือไม้พายในการตรวจเช็คเครื่องดื่มในโถปั่น**
17. **วางโถให้สนิทกับเครื่องทุกครั้งเมื่อใช้งาน**
18. **เครื่องปั่นนี้ใช้สำหรับปั่นอาหารและเครื่องดื่มเท่านั้น**
19. **ห้ามเปิดฝาโถในขณะที่เครื่องทำงาน**
20. **ห้ามเอามือล่วงเข้าไปในโถปั่น ขณะที่เครื่องทำงาน**
21. หากอนุญาตให้ผู้ด้อยความสามารถทางกายภาพเป็นผู้ใช้งาน ต้องมีผู้ใหญ่ที่มีความเข้าใจในการใช้งานและความปลอดภัยคอยดูแลอย่างใกล้ชิด
22. ห้ามปล่อยเครื่องให้เด็กใช้งานอย่างเด็ดขาด ควรเก็บเครื่องและอุปกรณ์ให้ห่างมือเด็ก
23. **ห้ามเด็กใช้งานเครื่องปั่นนี้ หากอนุญาตให้เด็กใช้งาน**ต้องมีผู้ใหญ่ที่มีความเข้าใจในการใช้งานและความปลอดภัยคอยดูแลอย่างใกล้ชิด
24. เครื่องปั่นน้ำผลไม้อเนกประสงค์ออกแบบสำหรับใช้ในที่ร่มเท่านั้น ห้ามนำไปใช้ในที่โล่งแจ้ง
25. เครื่องปั่นอเนกประสงค์นี้ ออกแบบให้ใช้ภายในครัวเรือนเท่านั้น บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบหากผู้ใช้งานใช้งานอย่างผิดวิธี หรือนำไปใช้นอกเหนือจากจุดประสงค์ของการออกแบบ

26. ปิดสวิตช์และถอดปลั๊กไฟออกจากเต้าเสียบไฟบ้าน**ทุกครั้งที่หลังใช้งาน ห้ามเสียบปลั๊กค้างไว้กับเต้ารับไฟบ้าน**
27. เก็บคู่มือนี้ไว้

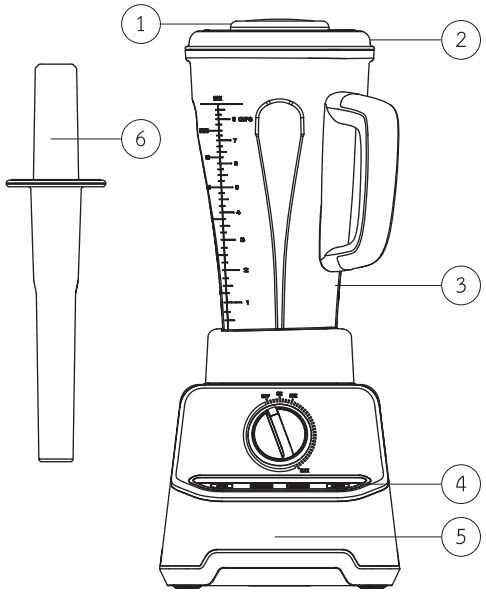

1. ถ้วยตวง
2. ฝาโถ
3. โถปั่นพร้อมระบบล็อคเพื่อความปลอดภัย
4. ปุ่มโปรแกรมเครื่อง
5. ตัวเครื่อง
6. ก้านคน

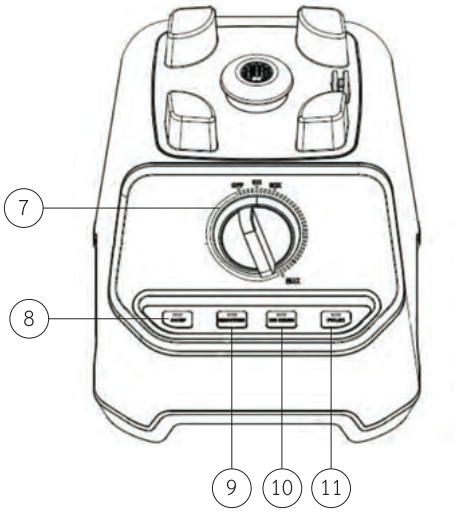

7. ปุ่มปรับความเร็ว
8. ปุ่มโปรแกรมปั่น 35 วินาที
9. ปุ่มโปรแกรมปั่น Smoothies
10. ปุ่มโปรแกรมปั่น น้ำแข็ง
11. ปุ่มโปรแกรมPulse

1. แกะสินค้าออกจากกล่อง
2. ทำความสะอาดทุกชิ้นส่วนก่อนการใช้งาน เช่น โถแก้ว ฝาโถ เป็นต้น

ระวัง! การทำความสะอาดใบมีด ควรล้างอย่างระมัดระวัง ไม่ควรใช้นิ้วสัมผัสใบมีดโดยตรง

โปรแกรม 35 วินาที

วางเครื่องบนโต๊ะพื้นระนาบ

1. ประกอบเครื่องปั่น ฝาโถประกอบวางกับโถให้สนิท
2. วางโถให้ลงล็อคกับตัวเครื่อง
3. เสียบปลั๊กเข้ากับไฟบ้าน
4. หมุนปุ่ม “On” จะปรากฏไฟที่หน้าเครื่อง กดโปรแกรม “35 SEC” เครื่องพร้อมทำงาน

หมายเหตุ : เครื่องไม่สามารถปรับระดับความเร็วเมื่อเข้าสู่โปรแกรม **35 วินาที**
หากต้องการหยุด ให้กดปุ่ม “35 SEC” เพื่อหยุดการทำงาน

5. ระหว่างที่เครื่องทำงาน ท่านสามารถเปิดถ้วยตวงเพื่อใส่หรือเติมส่วนผสมได้

หมายเหตุ : ห้ามยกโถออกจากเครื่องขณะที่ทำงาน ควรรอเครื่องหยุดปั่นสนิท แล้วจึงยกโถออก

6. เมื่อเสร็จโปรแกรมปั่น เครื่องหยุดอัตโนมัติ
7. ปิดเครื่อง โดยการถอดปลั๊กทุกครั้ง

หมายเหตุ : ปิดเครื่องทุกครั้งก่อนยกโถปั่นออกจากตัวเครื่อง เพื่อความปลอดภัย

โปรแกรม SMOOTHIE

1. วางเครื่องบนโต๊ะพื้นระนาบ เช็คว่าเครื่องปิด ก่อนเสียบปลั๊ก
2. ใส่อาหารและวัตถุดิบลงในโถปั่น เช่น

เมนู	วัตถุดิบ
สตอร์เบอรี่ปั่น	สตอร์เบอรี่แช่แข็ง :250 กรัม น้ำแข็ง : 100 กรัม กล้วยหอม : 120 กรัม โยเกิร์ต: 400 กรัม

หมายเหตุ : ห้ามใช้งานเครื่องโดยไม่มีวัตถุดิบในโถปั่น

3. ประกอบเครื่องปั่น ฝาโถประกอบวางกับโถให้สนิท
4. วางโถให้ลงล็อคกับตัวเครื่อง
5. เสียบปลั๊กเข้ากับไฟบ้าน
6. หมุนปุ่ม “On” จะปรากฏไฟที่หน้าเครื่อง กดโปรแกรม “SMOOTHIE” เครื่องพร้อมทำงาน

หมายเหตุ : เครื่องไม่สามารถปรับระดับความเร็วเมื่อเข้าสู่โปรแกรม SMOOTHIE
หากต้องการหยุด ให้กดปุ่ม “SMOOTHIE” เพื่อหยุดการทำงาน

7. ระหว่างที่เครื่องทำงาน ท่านสามารถเปิดถ้วยตวงเพื่อใส่หรือเติมส่วนผสมได้

หมายเหตุ : ห้ามยกโถออกจากเครื่องขณะที่ทำงาน ควรรอเครื่องหยุดปั่นสนิท แล้วจึงยกโถออก

ระวัง : หากใช้เครื่องปั่นรอบสูงกว่ากำหนด ทำให้เครื่องร้อนและหยุดทำงาน
ควรหยุดพักเครื่องเป็นเวลา 30 นาที เมื่อเครื่องเย็นลงจึงสามารถใช้งานต่อได้

8. เมื่อเสร็จโปรแกรมปั่น เครื่องหยุดอัตโนมัติ
9. ปิดเครื่อง โดยการถอดปลั๊กทุกครั้ง

หมายเหตุ : ปิดเครื่องทุกครั้งก่อนยกโถปั่นออกจากตัวเครื่อง เพื่อความปลอดภัย

โปรแกรม ICE CRUSH

1. วางเครื่องบนโต๊ะพื้นระนาบ เช็ควาเครื่องปิด ก่อนเสียบปลั๊ก
2. เตรียมน้ำแข็ง ควรเป็นน้ำแข็งขนาด 15 x 15 x 15 มม. ไม่ขนาดใหญ่เกินไป ใส่ลงในโถสัดส่วน 2:3 ของโถ
3. ประกอบเครื่องปั่น ฝาโถประกอบวางกับโถให้สนิท
4. วางโถให้ลงล็อคกับตัวเครื่อง
5. เสียบปลั๊กเข้ากับไฟบ้าน
6. หมุนปุ่ม “On” จะปรากฏไฟที่หน้าเครื่อง กดโปรแกรม “ICE CRUSH” เครื่องพร้อมทำงาน

หมายเหตุ : เครื่องไม่สามารถปรับระดับความเร็วเมื่อเข้าสู่โปรแกรม **ICE CRUSH**
หากต้องการหยุด ให้กดปุ่ม “**ICE CRUSH**” เพื่อหยุดการทำงาน

7. ระหว่างที่เครื่องทำงาน ท่านสามารถเปิดถ้วยตวงเพื่อใส่หรือเติมส่วนผสมได้

หมายเหตุ : ห้ามยกโถออกจากเครื่องขณะที่ทำงาน ควรรอเครื่องหยุดปั่นสนิท แล้วจึงยกโถออก

ระวัง : หากใช้เครื่องปั่นรอบสูงกว่ากำหนด ทำให้เครื่องร้อนและหยุดทำงาน
ควรหยุดพักเครื่องเป็นเวลา 30 นาที เมื่อเครื่องเย็นลงจึงสามารถใช้งานต่อได้

8. เมื่อเสร็จโปรแกรมปั่น เครื่องหยุดอัตโนมัติ
9. ปิดเครื่อง โดยการถอดปลั๊กทุกครั้ง

หมายเหตุ : ปิดเครื่องทุกครั้งก่อนยกโถปั่นออกจากตัวเครื่อง เพื่อความปลอดภัย

โปรแกรม PULSE

คือโปรแกรมปั่นรอบสูงฉับพลัน สามารถกดปุ่ม PULSE เพื่อปั่นรอบสูง หรือเพื่อขยับส่วนผสมในโถให้เข้าที่

หมายเหตุ : ไม่ควรใช้ PULSE นานเกิน 1 นาที/ รอบการปั่น

หากใช้เครื่องปั่นรอบสูงกว่ากำหนด ทำให้เครื่องร้อนและหยุดทำงาน
ควรหยุดพักเครื่องเป็นเวลา 30 นาที เมื่อเครื่องเย็นลงจึงสามารถใช้งานต่อได้

ปรับความเร็วตามปุ่ม

เครื่องปั่น Minimex Super Blend 3 มีปุ่มปรับระดับความเร็ว โดยท่านสามารถหมุนปุ่มเพื่อเลือกความเร็วระหว่าง “MIN” (ความเร็วต่ำ) และ “MAX” (ความเร็วสูง)

หมายเหตุ : ไม่ควรใช้ PULSE นานเกิน 1 นาที/ รอบการปั่น

หากใช้เครื่องปั่นรอบสูงกว่ากำหนด ทำให้เครื่องร้อนและหยุดทำงาน
ควรหยุดพักเครื่องเป็นเวลา 30 นาที เมื่อเครื่องเย็นลงจึงสามารถใช้งานต่อได้

หมายเหตุ : ปิดเครื่องทุกครั้ง ปุ่มหมุนไปที่ “OFF” ก่อนทำความสะอาด

1. การทำความสะอาดโถและใบมีด สามารถทำตามขั้นตอนดังต่อไปนี้

A : หลังการใช้งาน เติมน้ำอุ่นสะอาดปริมาณ 400-500มล. หยดน้ำยาล้างจาน 1-2 หยด
B : เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟบ้าน หมุนปุ่มไปที่ “ON” เลือกความเร็วต่ำ
C : เมื่อล้างทำความสะอาดแล้ว หมุนไปที่ “OFF” เพื่อปิด
D : ดึงปลั๊กออก ยกโถ ล้างทำความสะอาดอีกครั้ง

---

2. เช็ดตัวเครื่องด้วยผ้าสะอาด บิดหมาด
3. โถปั่น สามารถนำเข้าเครื่องล้างจานได้ ยกเว้นตัวเครื่องปั่น
4. ล้างและตากอุปกรณ์ให้แห้ง
5. หากเกิดเหตุระหว่างใช้งาน ห้ามซ่อมสินค้าเอง ติดต่อศูนย์บริการได้ที่ 02-493-6565

หมายเหตุ :
หลังการใช้งาน ควรล้างทำความสะอาดเครื่องทุกครั้งโดยทันที
หลีกเลี่ยงการสัมผัสใบมีดทุกครั้งในการทำความสะอาด
ห้ามใช้แผ่นขัดที่ผิวสัมผัสขรุขระ ทำวความสะอาดเครื่อง

เครื่องปั่นน้ำผลไม้ รุ่น Super Blend (MCB3) ระยะเวลารับประกัน 1 ปี (รับประกันมอเตอร์ 2 ปี)

เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและฝีมือการประกอบโดยสินค้าต้องใช้ใน ครัวเรือนเท่านั้น ผู้ใช้ ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ เช่น การนำเอาสินค้าที่ออกแบบมาเพื่อการใช้ในครัวเรือน แต่นำไปใช้เพื่อประกอบอาชีพหรือในเชิงพาณิชย์
- ใช้งานผิดวิธีหรือมิได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- มิได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า หรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า

การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่าความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯเท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆทั้งสิ้น หากบริษัทฯพิจารณาเห็นว่าต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้าแต่สินค้ารุ่นเดียวกันไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินว่าสินค้ารุ่นใดเหมาะสมที่จะเปลี่ยนแทน

การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่ถูกใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่าสินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้ามิได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น

ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการได้

Service Center : Tel. 02-493-6565, LineOA : @minimex_service

E-mail : SERVICE_minimex@penk.co.th

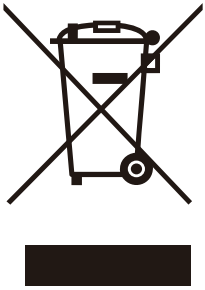

เราขอชี้ชวนให้ท่านร่วมรักษาสภาพแวดล้อม
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ เหมาะสม

MINIMEX
SUPER BLEND

Instruction Manual

COMMERCIAL BLENDER

Minimex

Model : Super Blend 3
(MCB3)

Instruction Manual

Commercial Blender

Model : MCB3

220-240V~, 50-60Hz, 1500W

English

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using, check and make sure that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
8. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
9. Avoid contacting moving parts.
10. Do not leave foreign objects, such as spoons, forks, knives or the measuring cup, in the jar as this will damage the blades and other components when starting the machine and may cause injury.
11. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
12. The use of attachment, including jar, jar lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.
13. Never run the appliance empty.
14. To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.
15. Keep hands and utensils out of jar while blending to reduce the risk of severe injury to persons or damage to the blender.
16. If scraping is necessary, turn the power OFF, unplug from the electrical outlet, and use a rubber spatula only.
17. Always operate blender with lid in place.
18. Never put non-food items into the jar for blending.
19. Do not open the lid before the blade stops running completely to avoid hazard.
20. Do not put hands or other objects into jar during working.

21. Appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
22. This appliance shall not be used by children.Keep the appliance and its cord out of reach of children.
23. Children shall not play with the appliance.
24. Do not allow children to use the blender without supervision.
25. Misuse may cause potential injury.
26. Do not use outdoors.
27. Save this instruction.

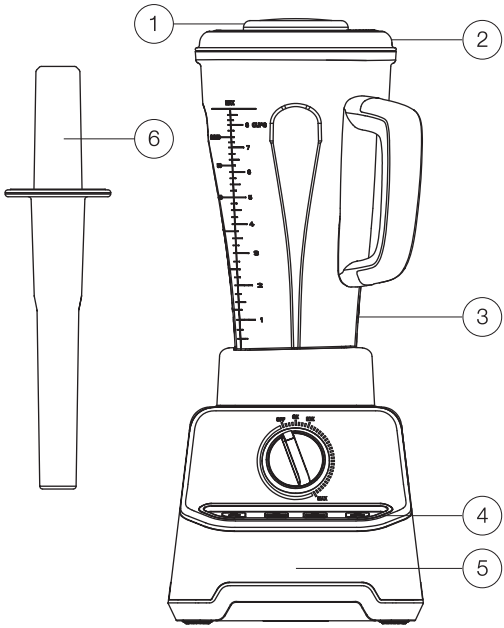

1. Measuring cup
2. Jar lid
3. Jar
4. Control panel
5. Motor unit
6. Blender rod

CONTROL PANEL

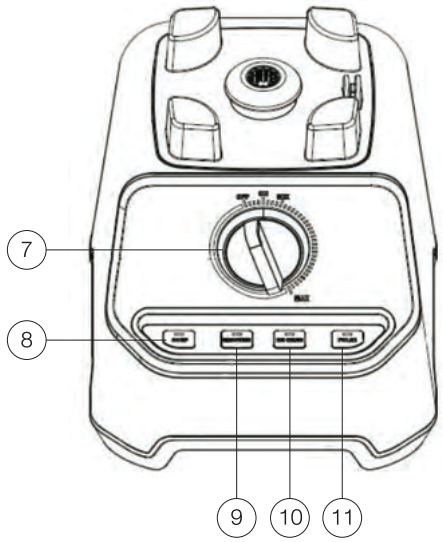

7. Speed knob
8. 35 SEC button
9. SMOOTHIE button
10. ICE CRUSH button
11. PULSE button

1. Unpack the appliance and place all parts on a horizontal surface.
2. Immerse the jar, jar lid and measuring cup in warm soapy water and then rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

CAUTION : The blade is very sharp, please handle carefully.

35 SEC.

Lay the appliance on a flat horizontal surface and make sure it is unplugged and the **"Speed knob"** turns to **"OFF"** position before operating.

1. Close the jar lid and measuring cup well in position.The jar lid must be closed well in position, or the appliance can not be activated.
2. Install the jar onto jar base, make sure that the jar is installed well in position.
3. Connect the appliance with power source.
4. Turn the **"Speed knob"** to **"ON"** position, and the indicators of four buttons illuminate solidly. And then press **"35 SEC."** button, its corresponding indicator lights solidly while the indicators of other three buttons extinguish, then the appliance starts to work.

NOTE : The speed can not be adjusted by the "Speed knob" when the appliance is running under the "35 SEC." mode.

NOTE : During the working process, if you want to make the appliance stop working, you can press "35 SEC." button again

5. During working, you can remove the measuring cup and then add ingredients into the jar through the center opening of jar cover during operation, and then replace measuring cup.

NOTE : You'd better not remove the jar from the motor unit during working process. If it is necessary to remove the jar, please firstly turn off the appliance to make it stop working and then remove it.

6. After finishing, the appliance will stop working automatically.
7. Unplug the appliance and then remove the jar from the motor unit, carefully remove the jar cover, then pour and serve.

CAUTION : The appliance must be unplugged before removing the jar.

SMOOTHIE

1. Lay the appliance on a flat horizontal surface and make sure it is unplugged and the **"Speed knob"** turns to **"OFF"** position before operating.
2. Put the ingredients into the jar, make sure the amount of ingredients should not exceed the maximum level as indicated on the jar. Follow the recipe as below to operate.

Recipe	Ingredient
Strawberry smoothie	Frozen strawberry : 250g Ice cube : 100g Banana : 120g Yoghurt : 400g

NOTE : Never run the appliance empty.

3. Close the jar lid and measuring cup well in position. The jar lid must be closed well in position, or the appliance can not be activated.
4. Install the jar onto jar base, make sure that the jar is installed well in position.
5. Connect the appliance with power source.
6. Turn the **"Speed knob"** to **"ON"** position, and the indicators of four buttons illuminate solidly. And then press **"SMOOTHIE"** button, its corresponding indicator lights solidly while the indicators of other three buttons extinguish, then the appliance starts to work.

NOTE : The speed can not be adjusted by the "Speed knob" when the appliance is running under the **"SMOOTHIE"** mode.

NOTE : During the working process of making smoothie, if you want to make the appliance stop working, you can press **"SMOOTHIE"** button again

7. During working, you can remove the measuring cup and then add ingredients into the jar through the center opening of jar cover during operation, and then replace measuring cup.

NOTE : You'd better not remove the jar from the motor unit during working process. If it is necessary to remove the jar, please firstly turn off the appliance to make it stop working and then remove it.

CUATION : Minimum 30-minute rest time must be maintained between continuous two cycles.

8. After finish making smoothie, the appliance will stop working automatically.
9. Unplug the appliance and then remove the jar from the motor unit, carefully remove the jar cover, then pour and serve.

CAUTION : The appliance must be unplugged before removing the jar.

ICE CRUSH

1. Lay the appliance on a flat horizontal surface and make sure it is unplugged and the **"Speed knob"** turns to **"OFF"** position before operating.
2. Prepare some ice cubes with a size of 15mm*15mm*15mm, then remove the measuring cup and jar lid, after it, put the ice cubes into the jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the ice and water is 2:3. The amount of mixture should not exceed the maximum level as indicated on the jar. Follow the recipe as below to operate.

Recipe	Ingredient	Operation
Ice crush	Solid ice cube : 8pcs, -18°C, 15*15*15mm	Select the "Ice crush" setting to operate.

3. Close the jar lid and measuring cup well in position. The jar lid must be closed well in position, or the appliance can not be activated.
4. Install the jar onto jar base, make sure that the jar is installed well in position.
5. Connect the appliance with power source.

6. Turn the **“Speed knob”** to **“ON”** position, and the indicators of four buttons illuminate solidly. And then press “ICE CRUSH” button, its corresponding indicator lights solidly while the indicators of other three buttons extinguish, then the appliance starts to work.

NOTE : The speed can not be adjusted by the **“Speed knob”** when the appliance is running under the **“ICE CRUSH”** mode.

NOTE : During the working process of crushing ice, if you want to make the appliance stop working, you can press “ICE CRUSH” button again

7. During working, you can remove the measuring cup and then add ingredients into the jar through the center opening of jar cover during operation, and then replace measuring cup.

NOTE : You’d better not remove the jar from the motor unit during working process. If it is necessary to remove the jar, please firstly turn off the appliance to make it stop working and then remove it.

CUATION : Minimum 30-minute rest time must be maintained between continuous two cycles.

8. After finish crushing ice, the appliance will stop working automatically. If the appliance crushes ice at your selected speed, you can turn the “Speed knob” to “OFF” position to make the appliance stop working when you get your desired processing result.
9. Unplug the appliance and then remove the jar from the motor unit, carefully remove the jar cover, then pour and serve.

CAUTION : The appliance must be unplugged before removing the jar.

PULSE

“PULSE” mode is used for processing food at the highest speed. You can activate the **“PULSE”** mode as required. Hold and press **“PULSE”** button to make the appliance keep processing food. To make the appliance stop working, release **“PULSE”** button.

CUATION : Do not operate the appliance for more than 1 minutes per time. Minimum 30-minute rest time must be maintained between continuous two cycles.

STEPLESS SPEED

This appliance is provided with stepless speed control. You can turn the **“Speed knob”** to select the speed settings ranged between **“MIN”** and **“MAX”** to make the appliance process food according to your selected speed.

CUATION : When the appliance is operated under your selected speed, do not operate the appliance for more than 1 minutes per time. Minimum 30-minute rest time must be maintained between continuous two cycles.

NOTE : Before cleaning, make sure the appliance is unplugged and the **"Speed knob"** turns to **"OFF"** position.

1. To clean the blender and blade assembly easily and rapidly in complete safety. Follow the operation of **A–D** as below to perform cleaning.

A : After use, reassemble the jar and pour about 400-500ml warm water into it.

B : Connect the appliance with power source, turn the "Speed knob" to "ON" position and select the desired speed, then the appliance starts running.

C : After finish cleaning, turn the "Speed knob" to "OFF" position and then the appliance stops working.

D : Unplug the appliance and then remove the jar from the motor unit, then rinse the jar under running water.

---

2. Wiping the outer surface of motor unit with a damp cloth, do not use abrasive cleansers. Never immerse it in water or other solution for cleaning.
3. All parts except the motor unit are dishwasher-safe. You can also wash the parts, except the motor unit, in warm, soapy water.
4. Dry all parts and then reassemble them again. But store the appliance with the jar lid not be closed completely to allow air to circulate and prevent jar odors.
5. If any problem has been encountered during use, never disassemble the Motor Unit by yourself, there are no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

WARNING :

1. The blade is very sharp, handle carefully when clean.
2. Do not use abrasive cleaners. Never immerse the Motor Unit in water for cleaning.

We hereby warranty our Commercial Blender model MCB3 in a period of 1 (one) year (Motor Warranty 2 years).

Warranty exceptions

We disclaim