

คู่มือการใช้งาน
เครื่องบดกาแฟ (สำหรับร้านกาแฟ)

Minimex
รุ่น CG Pro 4AD



Instruction Manual
Commercial Coffee Grinder

Model : CG Pro 4AD

220V., ~50Hz., 350W.

ไทย / English

คำแนะนำเพื่อความปลอดภัย:

ควรอ่านคู่มือเล่มนี้อย่างละเอียดก่อนใช้งาน


คำเตือน

1. ตรวจสอบระบบไฟ ได้แก่ แรงดันไฟ (โวลต์) ค่ากระแสไฟของตัวเครื่อง (วัตต์) ว่าเหมาะสมกับปลั๊กไฟในบ้านก่อนใช้งาน
2. เครื่องบดกาแฟนี้ ต้องเสียบปลั๊กไฟ พร้อมติดตั้งสายดินให้ครบวงจร
3. ควรอบรมพนักงานผู้ใช้งานอย่างละเอียด และดูแลอย่างใกล้ชิดในการใช้งานครั้งแรก อย่าปล่อยให้เด็กเล่น และไม่ควรรอนุญาตให้ผู้ต่อความสามารถเป็นผู้ใช้งาน
4. ห้ามวางเครื่องใกล้แหล่งความร้อน เช่น เตาอบ เตาไฟ เพราะอาจทำให้เครื่องเกิดความเสียหายได้
5. ควรปิดสวิตซ์และถอดปลั๊กออกทุกครั้งที่ทำทำความสะอาด หรือในสถานะที่ไม่ได้ใช้งานเป็นเวลานาน
6. **หยุดใช้งานทันที**ที่พบว่าเกิดการล่อกล ฉีกขาดของปลั๊ก หรือสายไฟ หรือเมื่อตัวเครื่องเกิดอาการผิดปกติ ควรติดต่อศูนย์บริการฯ เพื่อให้ช่างตรวจสอบแก้ไข
7. ห้ามใช้อุปกรณ์ หรืออะไหล่จากเครื่องรุ่นอื่นเพราะอาจจะเป็นสาเหตุให้เกิดความเสียหายกับตัวเครื่องได้
8. ตรวจสอบให้แน่ใจว่าสายไม่หักงอ ชิงตึงกับขอบโต๊ะ หรือเสียดสีกับของมีคม
9. เพื่อป้องกันไม่ให้เกิดอุบัติเหตุไฟช็อต ไฟรั่ว ห้ามจุ่มสายไฟหรือตัวเครื่องลงในน้ำ หรือของเหลวอื่นๆ
10. เมื่อเกิดอุบัติเหตุ เช่น เครื่องหล่นกระแทกพื้น ควรถอดปลั๊กไฟออก และหยุดการใช้งานทันที ควรส่งเครื่องเข้าตรวจสอบที่ศูนย์บริการฯ
11. ควรปิดสวิตซ์และถอดปลั๊กทุกครั้งก่อนทำความสะอาด หรือถอดชิ้นส่วน
12. ห้ามใช้เครื่องในที่โล่งแจ้ง
13. ควรเก็บคู่มือนี้ไว้

สำคัญ

- บริษัทฯ ขอสงวนลิขสิทธิ์ในการรับประกัน หากผู้ซื้อไม่ได้ใช้งานตามคำแนะนำในหนังสือคู่มือนี้
- ควรเก็บคู่มือนี้ไว้เพื่อการใช้งานในอนาคต

ส่วนประกอบ

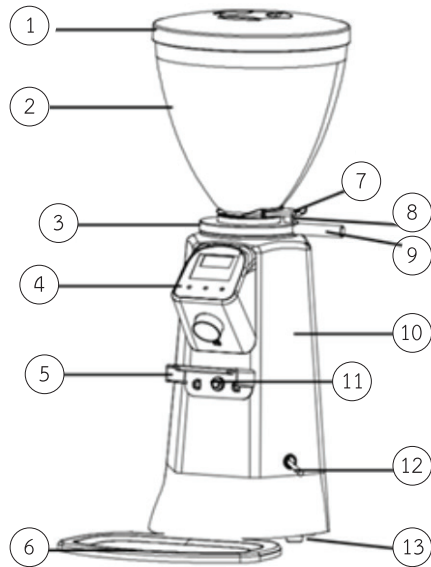

- | | | | |
|---|--------------------------|---|-----------------------------|
| ① | ฝาโถ | ⑧ | ปุ่มเลือกปรับระดับการบดกาแฟ |
| ② | โถใส่กาแฟ | ⑨ | ปุ่มตั้งระดับการบดกาแฟ |
| ③ | วงแหวนแสดงระดับการบดกาแฟ | ⑩ | ตัวเครื่อง |
| ④ | จอเครื่อง | ⑪ | ปุ่มกดรับกาแฟ |
| ⑤ | ฐานเสียบตัวกรอง | ⑫ | ปุ่มเปิด/ปิด (สวิตช์หลัก) |
| ⑥ | ถาดรองเครื่องบดกาแฟ | ⑬ | ปุ่มเบรกเกอร์ Reset เครื่อง |
| ⑦ | แผ่นปิดกาแฟ | | |

ก่อนการใช้งาน

- เมื่อเปิดกล่องและนำเครื่องออก ควรตรวจสอบสภาพตัวเครื่องว่ามีอุปกรณ์ครบตามที่ระบุไว้ในคู่มือ และไม่พบความเสียหาย หากท่านพบความบกพร่องใดๆ ไม่ควรประกอบตัวเครื่อง ควรแจ้งให้เจ้าหน้าที่ ของบริษัทฯ ทราบเพื่อแก้ไขทันที
- ทำความสะอาดอุปกรณ์ก่อนการประกอบเครื่อง โดยเฉพาะโถใส่กาแฟ
- ควรวางตัวเครื่องไว้บนพื้นโต๊ะที่เรียบแข็งแรง และปราศจากความเปียกชื้น อุณหภูมิห้องระดับ -10 ถึง 40 องศาเซลเซียส เหมาะกับการใช้งานเครื่อง

แนะนำชิ้นส่วนเครื่อง

1. ฟาโถ : ป้องกันเศษฝุ่น
2. โถใส่กาแฟ : ใส่กาแฟ
3. วงแหวนแสดงระดับการบดกาแฟ : แสดงระดับการบด
4. หน้าจอ : แสดงค่าเวลาบดกาแฟ (วินาที)
5. ฐานเสียบตัวกรอง : รองรับก้านชงกาแฟ
6. ถาดรองเครื่องบดกาแฟ : รองเศษกาแฟ
7. แผ่นปิดกาแฟ : กรองเมล็ดกาแฟ
8. ปุ่มล็อกปรับระดับการบดกาแฟ : ล็อกค่าเบอร์บด
9. ปุ่มปรับระดับการบดกาแฟ : ปรับการบดให้เหมาะสมกับการชงกาแฟ
10. ตัวเครื่อง : รองรับระบบการบด
11. ปุ่มกดรับกาแฟ : เครื่องเริ่มทำงานเมื่อก้านชงกดที่ปุ่ม
12. สวิตช์หลัก : ปุ่มเปิด/ปิดหลัก
13. ปุ่มเบรกเกอร์ Reset เครื่อง : ป้องกันกันใช้งานเกินอัตราที่กำหนดไว้

การตั้งความหยาบ-ละเอียดการบดเมล็ดกาแฟ

1. การเลือกระดับการบดหยาบ-ละเอียดของเมล็ดกาแฟ ขึ้นอยู่กับชนิดของเครื่องชงกาแฟแต่ละประเภท ผู้ใช้ควรทราบระดับการบดที่เหมาะสมกับเครื่องชงกาแฟแต่ละชนิด เช่น
 - ระดับความละเอียดการบดกาแฟเบอร์ 1-3 ละเอียด : เครื่องชงกาแฟเอสเปรสโซ่
 - ระดับความละเอียดการบดกาแฟเบอร์ 4-8 ปานกลาง : เครื่องชงกาแฟเอสเปรสโซ่ระบบมือ (ไม่ใช่ไฟฟ้า), เครื่องชงกาแฟ Siphon
 - ระดับความละเอียดการบดกาแฟเบอร์ 8-11 ปานกลาง : เครื่องชงกาแฟ Cold Brew

2. ค่าบดของเครื่องบดกาแฟ มีอยู่ 11 ระดับ (รูปที่ 1)

1 คือ บดละเอียดสุด, 11 คือ บดหยาบสุด



(รูปที่ 1)



(รูปที่ 2)



(รูปที่ 3)

การใช้งาน

1. ตรวจสอบแรงดันไฟ(โวลต์) และค่าความถี่(Hz) ของตัวเครื่องให้แน่ใจว่าตรงกับไฟฟ้าบ้าน เครื่องบดกาแฟ 220V 50Hz
2. เลือกเบอร์บดกาแฟ ตั้งค่า และล็อกค่าบด
3. ใส่เมล็ดกาแฟลงในโถบด
4. เปิดสวิตช์ไฟ ใส่ก้านชงให้ถูกปุ่มกดรับกาแฟ เครื่องเริ่มทำงาน (รูปที่ 2)
5. กาแฟบดออกจ่ายช่องจ่ายกาแฟ ลงก้านชงกาแฟ
6. ดึงก้านชงออก เมื่อได้ปริมาณกาแฟบดที่ต้องการ เครื่องหยุดทำงาน
7. เครื่องเช็คปุ่มล็อกปรับระดับการบดกาแฟให้เข้าที่ทุกครั้ง เมื่อมีการปรับเบอร์บดกาแฟ (รูปที่ 3)

การใช้งานหน้าจอ

1. เมื่อเปิดเครื่อง หน้าจอจะเข้าสู่โหมดสแตนด์บาย
 2. โหมดสแตนด์บาย
 - 2A) กดปุ่มกลาง : การบดแมนนวล (ไม่จำกัดเวลา) ใส่ก้านชงให้ถูกปุ่มกดรับกาแฟ เครื่องเริ่มทำงานดึงก้านชงออก เมื่อได้ปริมาณกาแฟบดที่ต้องการ เครื่องหยุดทำงาน
- หมายเหตุ :** การกดปุ่มใดๆบนหน้าจอ เพื่อการหยุดการทำงานของเครื่องได้เช่นกัน
- 2B) กดปุ่มซ้าย : Single Cup (1 ช็อต) ใส่ก้านชงให้ถูกปุ่มกดรับกาแฟ เครื่องจะทำการบดเป็นเวลา 4 วินาทีอัตโนมัติ หากต้องการหยุดการบดกะทันหัน ให้กดปุ่มที่หน้าจอเพื่อหยุดทำงาน

หมายเหตุ

- A. เครื่องบดกาแฟถูกออกแบบมาเพื่อบดกาแฟเท่านั้น ไม่สามารถบดอาหารแห้ง และวัตถุดิบอื่นๆ
- B. เครื่องสามารถบดต่อเนื่องเป็นเวลา 5 นาที หรือบดกาแฟ 1 กก. และควรหยุดพักเครื่อง แล้วจึงใช้งานต่อ
- C. หากเครื่องดับระหว่างการใช้งาน (ใช้งานเกินเวลาที่กำหนด) ให้หยุดพักเครื่องโดยทันที

วิธีแก้ไข

- ปิดเครื่อง ปรับเบอร์บดที่หมายเลข 11 (บดหยาบ) กดปุ่มเบรกเกอร์ Reset
- ปลดปล่อยให้เครื่องเย็น เปิดเครื่องอีกครั้ง ทำความสะอาดเฟืองบดโดยแปะเศษกาแฟออก ตั้งค่าบดที่ต้องการ และเปิดเครื่องเพื่อใช้งานอีกครั้ง

- D. ใช้แปรงขนาดเล็กขัดเศษกาแฟบดสำหรับเฟืองบด และช่องจ่ายกาแฟ
- E. ห้ามแกะเครื่องเพื่อซ่อมแซมเอง ควรติดต่อศูนย์บริการ

การตั้งเวลา

- A). Single Cup (1 ซื๊อต) : กดปุ่มซ้าย 3 วินาที จนสัญญาณไฟกระพริบ 4 วินาที เครื่องพร้อมให้ตั้งค่า กดปุ่มซ้ายเพื่อลดจำนวนวินาที กดปุ่มขวาเพื่อเพิ่มจำนวนวินาที เมื่อได้ค่าที่ต้องการ กดปุ่มกลางเพื่อยืนยัน และออกจากการตั้งค่า โดยปกติ Single Cup (1 ซื๊อต) ถูกตั้งค่ามาที่ 4 วินาที
- B). Double Cup (2 ซื๊อต) : กดปุ่มซ้าย 3 วินาที จนสัญญาณไฟกระพริบ 8 วินาที เครื่องพร้อมให้ตั้งค่า กดปุ่มซ้ายเพื่อลดจำนวนวินาที กดปุ่มขวาเพื่อเพิ่มจำนวนวินาที เมื่อได้ค่าที่ต้องการ กดปุ่มกลางเพื่อยืนยัน และออกจากการตั้งค่า โดยปกติ Double Cup (2 ซื๊อต) ถูกตั้งค่ามาที่ 8 วินาที
- C). หากไม่ยืนยันการตั้งค่าภายใน 1 นาที เครื่องจะกลับเข้าสู่ค่าเดิมที่ตั้งเอาไว้
- D). หากต้องการกลับไปยังค่าเริ่มต้น กดปุ่มกลาง และปุ่ม Single Shot (ปุ่มซ้าย) พร้อมกันเป็นเวลา 3 วินาที เครื่องจะกลับไปสู่ค่าเริ่มต้นที่ตั้งไว้

การแก้ปัญหาเบื้องต้น

ปัญหา	สาเหตุ	วิธีแก้ปัญหา
เครื่องไม่ทำงาน	ไฟไม่เข้าเครื่อง	ตรวจสอบแรงดันไฟ (โวลต์) และค่าความถี่ (Hz) 220V, 50Hz
	ใช้งานเครื่องเกินกำหนด	กดปุ่มเบรกเกอร์ Reset
	ปุ่มเปิด/ปิดไม่ทำงาน	ติดต่อศูนย์บริการ
	ระบบผิดปกติ	ติดต่อศูนย์บริการ
เครื่องทำงานผิดปกติ	มีสาร/เศษปะปนในเมล็ดกาแฟ	เช็คเมล็ดกาแฟ และทำความสะอาดเครื่อง
	อาจเกิดเสียหายภายในระบบ	ติดต่อศูนย์บริการ
เครื่องมีกลิ่น	มีสารตกค้างในโถหรือเฟืองบด	ทำความสะอาดด้วยการล้างโถ หรือใส่เมล็ดล้างเฟืองบด

*นอกเหนือจากปัญหาดังกล่าว สามารถติดต่อที่ศูนย์บริการ

การทำความสะอาด

1. ปิดเครื่องและดึงปลั๊กออกจากเต้าเสียบ
2. เช็ดเครื่องบดกาแฟด้วยผ้าสะอาดบิดหมาด

หมายเหตุ : ห้ามเช็ดเครื่องด้วยแอลกอฮอล์ หรือน้ำยาทำความสะอาด ห้ามนำเครื่องถูกน้ำ

3. เลื่อนแผ่นปิดกาแฟ ปิดเข้ากับโถใส่กาแฟ ยกโถกาแฟออก เทกาแฟที่ค้างอยู่กลับใส่ลงกาแฟ ทำความสะอาดโถใส่กาแฟด้วยการล้าง เช็ดให้แห้ง สำหรับเมล็ดกาแฟที่ค้างอยู่บนเฟืองบด ให้นำออกใช้แปรงขัดเศษผงกาแฟ ด้วยผ้าสะอาดบิดหมาด

หมายเหตุ :

- A). ตั้งเบอร์บดที่เบอร์ 11 จะช่วยให้ทำความสะอาดเฟืองบดได้ง่ายขึ้น
- B). ใช้ผ้าสะอาดบิดหมาดเช็ดเครื่องเท่านั้น

4. โถจ่ายกาแฟบด ใช้ผ้าสะอาดบิดหมาดเช็ดเท่านั้น

การรับประกัน

เครื่องบดกาแฟ (สำหรับร้านกาแฟ) รุ่น CG Pro 4AD ระยะเวลาประกัน 1 ปี

เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและฝีมือการประกอบโดยสินค้าต้องใช้ในครัวเรือนเท่านั้น ผู้ใช้ ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ เช่น การนำเอาสินค้าที่ออกแบบมาเพื่อการใช้ในครัวเรือน แต่นำไปใช้เพื่อประกอบอาชีพหรือในเชิงพาณิชย์
- ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- ไม่ได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า หรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า

การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่าความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่าต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้าแต่สินค้านั้นเดิมๆไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่าสินค้านั้นใดเหมาะสมที่จะเปลี่ยนแทน

การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่พอใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่าสินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้ามิได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น


ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการได้

Service Center : Tel. 02-493-6565, LineOA : @minimex_service

E-mail : SERVICE_minimex@penk.co.th

ช่วยกันรักษาสิ่งแวดล้อม

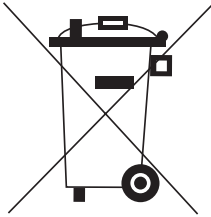

เราขอชี้ชวนให้ท่านร่วมรักษาสิ่งแวดล้อม
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ที่เหมาะสม



Instruction Manual
COMMERCIAL COFFEE GRINDER

Minimex

Model : CG Pro 4AD



Instruction Manual
Commercial Coffee Grinder

Model : CG Pro 4AD

220V., ~50Hz., 350W.

English


IMPORTANT SAFEGUARDS :

Before using machine always carefully read and comply with all these instructions.

We cannot accept any responsibility for the consequences of improper use.

1. Check voltage to be sure that the voltage indicated on the name plate agrees with your voltage.
2. Children should be supervised to ensure that they do not play with the appliance.
3. Do not place on or near a hot gas or electric burner or in a heated oven.
4. Unplug from outlet when not in use and before cleaning. Allow to stop before putting or taking off parts, and before cleaning the appliance.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
6. The use of accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
7. Be careful to ensure that the power cable does not become trapped and does not rub against sharp edges.
8. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs, or body of machine in water or other liquid.
9. Once the fault, defect or machine drop caused by suspicious defect, unplug the power plug immediately, do not operate on the problem machine.
10. Be sure to unplug the power cord if disassembly of the parts, to avoid risk of inadvertently touching switch.
11. Do not use outdoors. For household use only.
12. **SAVE THESE INSTRUCTIONS**

KNOW YOUR COFFEE GRINDER

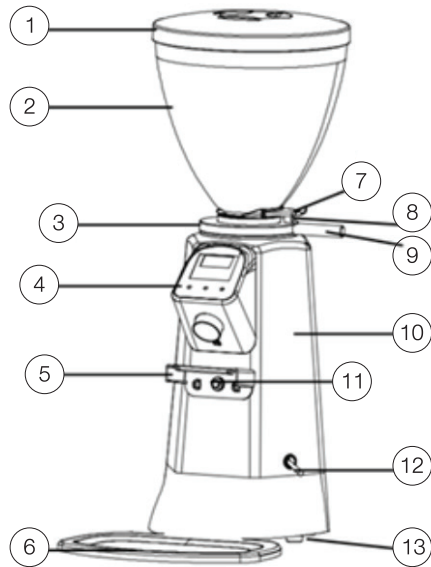

- | | |
|-----------------------|---------------------------------|
| 1 Bean hopper cover | 8 Lock screw |
| 2 Bean hopper | 9 Adjust knob |
| 3 Adjust plate | 10 Main body |
| 4 display | 11 Touch button |
| 5 Powder holder | 12 Shifter lever switch |
| 6 Powder mat | 13 Circuit breaker reset switch |
| 7 hopper baffle plate | |

FOR THE FIRST USE

1. Remove the coffee grinder from package, and check the accessories according to the list.
2. Clean all the detachable components.

CONDITIONS OF USE THE PRODUCT

Ambient temperature should be between $-10^{\circ}\text{C} \sim 40^{\circ}\text{C}$.

INTRODUCTION OF PRODUCT PARTS

1. Bean Hopper Cover: Dustproof and fresh-keeping coffee beans.
2. Bean hopper: Store beans that need to be ground.
3. Display: Display the grinding time and setting.
4. Touch Button: Control the machine working on/off.
5. Powder holder: Support the powder funnel to holding the powder.
6. Hopper baffles plate: Control the bean volume.
7. Adjust plate: Adjust the powder thickness.
8. Main body: supporting each part, used for isolation and electric parts.
9. Knob power switch: Power switch controls on and off of power.
10. Base: stabilize the machine.
11. Adjust Knob: Adjust the powder thickness.
12. Powder Mat: holding the coffee powder residue.
13. Lock screw: Tighten the screws after adjusting the scale.
14. Circuit breaker reset switch: the circuit breaker reset switch is used for machine overload protection tripping reset.

FUNCTION


1. Various coffee appliances, require different grinding thickness, it is recommended that you understand your device, select the appropriate thickness scale.

Such as: f

inest powder: 1-3: espresso; Medium powder: 4-8: espresso,

hand-brewed coffee, siphon coffee; Coarse: 8-11: Americano, cold brews coffee

2. The number on top of knob means the thickness of coffee powder, “1” is the finest, and “11” is the coarsest; adjust it as your favorite or adjust it to the desired position to control the thickness of the powder basic on coffee appliance. (See Pic 1)

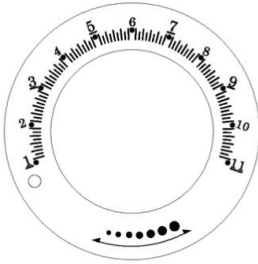

(Pic 1.)



(Pic 2.)



(Pic 3.)

HOW TO USE

1. Access AC220V / 50Hz power supply.
2. Locked the adjust knob and nut after adjust the knob as your requirements thickness scale.
3. Put the powder holder into the powder receiving bracket or use an external powder cup, put the lid on the powder cup, and place it below the outlet.
4. Open On/Off switch, Use the powder holder or external powder cup to push the touch button, then start working. See (Pic 2)
5. Coffee powder go through the powder cup and falling into the powder holder or external powder cup.
6. The machine wills stops working when the powder holder leaves from the touch button, pls turn off the power switch after use.
7. Pls use the lock screw to lock it tight after adjust the thickness to turn on the machine. (Pic 3)

INSTRUCTION HOW TO USE

1. Turn on the power switch, and the default factory state which is 3 button indicators is lights on, and goes into standby mode.
2. **Under standby mode.**

2A)

Touch the middle button (manual mode), the middle button is lights on, and the left and right button lights are off. Touch the touch button, machine starting work, it will stop working if the holder leave from the touch button during working mode.

NOTE : No matter whether there is always or no object touches the touch button, press any button or touch the touch button again, the machine stops working.

2B)

Touch the left button (single cup mode), the left button lights is on, the middle button and the right button lights are off; Touch the touch button lightly (or press the left button again), the machine starts to work, make a single cup, machine will stops working after 4s; the left button will lights on and return to the single cup mode; If the machine needs to stop working in an emergency situation, press any button again to stop the machine.

NOTE : under single cup mode, it will not stop working even though touch the touch button again under working mode.

NOTE :

- A.** The grinder can grind crisp and dry food.
- B.** In order to protect the machine overheating, when the machine continues to work for more than 5min or more than 1kg coffee bean, we suggested that stop working for 5 min then continuing to work.
- C.** During grinding, machine overload causes the machine to stop working.

Treatment steps:

- Turn off the power switch, turn the knob to the thickest “11” scale, reset the circuit breaker manually.
- Turn on the power switch, and clean the coffee powder. After cleaning, adjust the knob to the desired scale and tighten the nut.

-
- D.** With a small brush for cleaning the residual powder in the powder channel;
 - E.** Do not disassemble the machine by yourself.

SETTING TIME

- A) Long press the left button (single cup) 3s to enter to the single cup time setting mode, display screen indicator lights will flashing 4s, press left button is decrease the time, press right button is increase the time,(frequency 0.1s/time). After meeting the requirements, press the middle button to exit the setting mode. Factory default setting is 4s.
- B) Long press the right button (double cups) 3s to enter to the double cups time setting mode, display screen indicator lights will flashing 8s, press left button is decrease the time, press right button is increase the time,(frequency 0.1s/time). After meeting the requirements, press the middle button to exit the setting mode. Factory default setting is 8s.
- C) If you enter the single-cup or double-cup setting mode, follow Step 1 or 2 to adjust the program, the program will automatically cancel the setting if you do not press the middle button to confirm within 60 seconds. The program returns to before setting time.
- D) Restore factory setting: Press the middle button and the left button 3S at the same time to restore factory Settings.

TROUBLESHOOTING

Problem	Cause/Result	Action
The machine does not work	The power cord is unpowered.	Collect power or use AC220V/50Hz Voltage.
	Power supply circuit.	Cleaned the coffee powder, press the circuit breaker button to reset.
	Power switch is damaged.	Please contact with the authorized service facility for repairing.
	The machine is malfunction.	Please contact with the authorized service facility for repairing.
Motor Stall	There is foreign body in coffee bean.	Clean and maintenance or contact with the authorized service.
	The machine is malfunction.	Please contact with the authorized service facility for repairing.
Machine is peculiar smell.	The residue was not clean.	Thoroughly clean the machine residues.

***If you have not been able to solve the problem, pls contact our customer support.**

CLEAN AND MAINTENANCE

1. Cut off power cord before cleaning (Unplug the power).
2. Clean the main body with dry cloth.

NOTE : Do not clean with alcohol or solvent cleanser.
Never immerse the housing in water for cleaning.

3. Close the hopper baffle plate, remove the bean hopper, and pour out the remaining powder in the grinder, clean dregs inside with dry cloth or brush.

- A.** Adjust the knob to 11 position when cleaning, which is easy to pour out coffee powder.
- B.** Only use dry cloth or dry cleaning tools to clean.

4. Use dry cloth or brush to clean bean hopper and ground coffee box.

- C.** Touch the right button (double cup mode), the right button lights is on, the middle button and the left button lights are off; Touch the touch button lightly (or press the right button again), the machine starts to work, make a double cups, machine will stops working after 8s; the right button will lights on and return to the double cups mode; If the machine needs to stop working in an emergency situation, press any button again to stop the machine.

NOTE :

under double cups mode, it will not stop working even though touch the touch button again under working mode.

WARRANTY

We hereby warranty our Commercial Coffee Grinder model CG Pro 4AD in a period of 1 (one) year.

Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use and maintain following the instructions manual..

Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof of purchase.

Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the product is in warranty or not. The decision is solely the rights of the company. If the product proved to be defected and covered by warranty, company will be responsible for parts and labor to repair and deliver the product to customers' house. Customers do not have to pay any fee.If the company considers that it must change its products to customers, but the same model of product is not available, the company will determine an appropriate version of the product to be replaced.

Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after purchasing date only if the product is completely perfect packaging and has not been used before.
Customers must present proof of purchase to return the product at the store of purchase only.

Service Center

If customer need service or information, customer can contact our Minimex Service Center

Service Center : Tel. 02-493-6565, LineOA : @minimex_service

E-mail : SERVICE_minimex@penk.co.th

ENVIROMENT FRIENDLY DISPOSAL

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials which should be salvaged for recycling.

Please therefore dispose of old machines via your regional collection system





DISTRIBUTOR

จัดจำหน่ายโดย

บริษัท เพ็ญ เเค อินเตอร์เทรดดิ้ง จำกัด

อาคาร พี.บี. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64

ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

หมายเลขโทรศัพท์ 02-493-6565 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-493-6565